

## To purchase a Movie on Pay-Per-View:

[You must purchase the movie before or within 15 minutes of the start time]

1. Enter the channel number (or)
2. Press **Guide**
3. Use Arrow keys to view movies/events for the day
4. Highlight the movie/event you would like to buy (the prices are shown on the guide) and press **OK**
5. You can choose to share with all set top boxes or only the one you are on.
6. Enter pin #. The default is 0000. This pin can be changed in the Menu under Settings.
7. Select "Purchase"
8. The last screen will confirm the purchase and you can begin watching the movie.

## Video On Demand:

1. Press the Green **VOD** button on your remote.
2. You may now choose what content you wish to view. Use the arrow buttons on your remote to highlight the category you wish to choose and press **OK**.
3. Use the arrow buttons to search and highlight the show or movie you want and press **OK**. You will now have the option to "Rent" the program. It will ask if you want to share it with your whole home and for a purchase pin. The pin # is defaulted at 0000. You may now watch your movie and the purchase will show on your next month's bill.
4. If you would like to change your pin #, go to Menu>Settings>Parental>Change Pin. If you would like to prevent any purchases from being made, please call our office.

## Programming Your Remote Control

1. Switch on your device. Then press the **TV** key.
2. Press and hold the **RCU SETUP** button until the mode key blinks twice.
3. Press **991**. The mode key blinks twice.
4. Aim the remote at the TV and press **POWER**.
5. Press **CH+** and **CH-** repeatedly until the device is switched off.
6. Press **POWER** to turn the TV on.
7. Press **RCU SETUP** to store the code for the TV. The mode key blinks twice. Your remote control is now programmed to operate your TV set.

If these instructions do not work, the remote may need to be set up using the specific code for the TV. Complete brand codes and instructions can be found on our website at [www.brucetel.net](http://www.brucetel.net) under the Digital TV tab for the ADB remote programming guide.

## Input:

To change the input on your Set Top Box (HDMI, A/V, Component, etc.) simply press the **STB** button (upper right hand corner of your remote) and then press the **Input** button (lower left hand corner of your remote). If you see "No Signal" on your TV, the most likely cause is that the input has been changed.

# Using your **ADB** Remote Control

## Control the Remote



Bruce Telephone Company, Inc.

715-868-5111

[www.brucetel.net](http://www.brucetel.net)

## Turn on your TV using the Remote Control:

Press the white **TV** button on the upper left corner of the remote. Press the **Power** button. To control the set top box, press the **STB** button and then continue use as normal.

## Finding a Channel/Program or Changing Channels:

1. Enter the desired channel number OR
2. Press channel up/down OR
3. Press **Guide** to view a complete list of channels. Scroll through the channel line up using the up/down arrow keys located around the OK button or using the channel up/down button. Select the desired channel by pressing **OK**. To scroll by page, use the page + or - button located below the OK button.

## Menu Button:

TV - This gives you Guide options, Search options, and the What's Hot app.  
Recordings - takes you to your DVR Recordings  
On Demand - Video On Demand content  
Phone - Shows your Recent calls and System Messages  
Apps - Games, Weather, and What's Hot apps  
Settings - Settings for Apps, Display, Favorites, Guide, Parental Controls, Phone (caller ID on TV), and Recordings.

## Closed Captioning:

Closed captioning will need to be enabled when wanted and disabled when not. To enable the Closed Captioning, go to Menu>Settings > Display>Turn Closed Captioning on. To turn it back off, go to Menu>Settings> Display>Turn Closed Captioning off.

## During Live TV:

Press **OK** to view a Mini Bar across the top of the screen with the channel number and description, date, time, and temperature.

Press the **forward arrow** (to the right of the **OK** button) to view a status bar of the show you are watching that also includes the channel number and description, date, time and temperature.

## Shortcuts During Live TV:

● Red Button - Shortcut to the Weather App

● Green Button - Shortcut to your call log of recent calls

● Yellow Button - Shortcut to Apps

< Left Arrow - Allows you to search for a program by name.

> Right Arrow - View the name of the program you are viewing and a status bar along with current weather conditions. If you use the right arrow you can view what's coming up next on that channel.

## Restart TV:

From the Guide: Programs that have a green arrow on the left side have the ability to restart (watch the show from the very beginning even if it is half-way through or almost over). Press the **Green** button to start the show from the start. Depending on which Set Top Box you have, you will have the ability to fast-forward through the commercials when you restart the program.



Restart TV

## DVR Function Buttons:

The DVR function buttons are located toward the top of the remote and include: **Rewind, Fast Forward, Stop, Record, Skip back, and Skip ahead**. Use these function buttons to control the LIVE program you are currently watching.

## To Record A Program:

From live TV: Press the red **Record** button and a menu will pop up to choose a one-time, series recording, or set a reminder or auto-tune.

From the Guide: Highlight the program you wish to record and press **OK** or the red **Record** button and a menu will pop up to choose a one-time, series recording, or set a reminder or auto-tune.

## To View A Recorded Program:

Press **DVR List** button. Highlight the program you wish to watch and press **OK** or you can choose one of the following options from the bottom of the screen:

1. Delete - delete the recording
2. Actions - allows you to edit the item, group recordings, or move to a folder.
3. Search - search for shows with the same title
4. Sort - sort your recordings by name or date

## Setting a Reminder/Auto-tune:

From live TV: Press the red **Record** button, arrow over to the Reminder option. Here you can choose your reminder options and set up an auto-tune.

From the Guide: Highlight the program you would like to set a reminder for, press the red **Record** button or the **OK** button, arrow over to the Reminder option. Here you can choose your reminder options and set up an auto-tune.